



Clarger

01

0

Se e

O charge

ENERGY. ANYTIME. ANYWHERE.

EASYPLUS





EasyPlus

Multi-functional power solution

The EasyPlus is a multifunctional energy system consisting of a powerful sinewave inverter, a sophisticated battery charger, a high speed AC transfer switch and AC distribution in a single light weight and compact enclosure. The system has been designed for those who want to enjoy the comfort and freedom of a complete energy system without spending time on the installation of separate components and difficult technical procedures

Optimum comfort and safety

The EasyPlus guarantees uninterrupted power supply, whenever and wherever you are. Where shore or generator power is limited, the unique PowerAssist[®] technology makes it possible to boost the total capacity by adding extra energy from the batteries. Optimum safety is guaranteed with the integrated RCD (Residual Current Device) protecting against earth leakage.

5 step installation: quick and easy

The EasyPlus gets its name from the simplicity of installation and use. The system can be installed within five simple steps making significant savings in time as well as space. The Easy Plus provides plugs and sockets for all AC connections and is supplied with the battery cables already fitted so you can save hours in installation time.

Step 1. Select a suitable place for the EasyPlus (as close as possible to the batteries) and install the wall mounting bracket. Attach the Easy Plus to the bracket and secure it with the screws provided.

Step 2. Connect the shore/generator input power and the outgoing circuits (including dedicated water heater feed) to the Easy Plus.

Step 3. Connect the control panel (optional) with the UTP patch lead.

Step 4. Connect the battery cables and temperature sensor to the batteries (also supplied as standard).

Step 5. Switch on the RCD, the AC distribution and the inverter charger and the system is ready to use.

How does it work?

The EasyPlus is connected to the batteries and to the shore power or generator. The maximum available generator or shore current is set using the dial on the control panel. The output consumers are divided into two groups. The first group consists of the 'regular', low or short term power users such as sockets or kitchen equipment. This group can be fed from both shore/generator and battery power via the inverter. The second group is the 'heavy user' circuit. This can be a water heater or the air-conditioning. In order to protect the batteries from excessive discharge, this group is shore/generator-only and cannot be supplied when the inverter is functioning. Unique PowerAssist[®] technology protects the shore or generator from being overloaded by adding extra inverter power when needed.



Technical information


12 Volt 1600VA sine wave inverter (3000 Watt peak power)	Dimensions
70A charger incl. 4A trickle charge for start battery	Height : 510mm Width: 214mm Depth : 110mm Weight : 11,7Kg
Unique PowerAssist® technology protects the shore or generator from being overloaded by adding extra inverter power when needed	
4 stage adaptive charge technology for quick and accurate battery charging	
The AC distribution consists of a RCD (30mA/16A) and four AC outputs protected by two 10A and two 16A circuit breakers	
One 16A output is controlled by the AC input: it will switch on only when AC is available.	
RCD (30mA/16A) on AC output	
No-break system: uninterrupted switching between shore/generator and inverter	



24 Month worldwide warranty

Battery cables included

Typical installation and Wiring Diagram

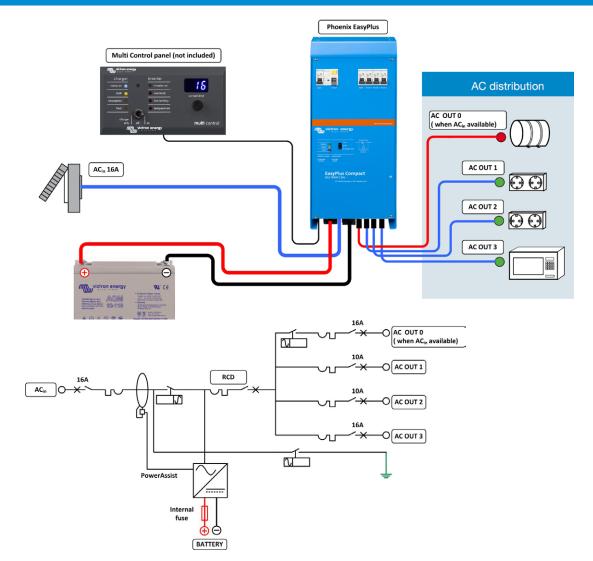











Victron Energy B.V. / De Paal 35 1351 JG Almere / The Netherlands Phone: +31 (0)36 535 97 00 Fax: +31 (0)36 535 97 40 e-mail: sales@victronenergy.com www.victronenergy.com

SAL064100020 REV 03 2014-06